


INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
EXHAUST PIPE FINISHER P/N 08F53-SLN-100	2007 FIT	AII 31596
		Issue Date
		MAR 2006

PARTS LIST

Exhaust finisher

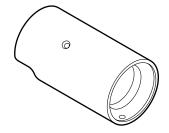

2 Flange bolts



TOOLS REQUIRED


10 mm Socket Torque wrench

INSTALLATION


NOTE:

- Allow the exhaust pipe to cool down before you install the exhaust finisher kit.
- Never use abrasive-type cleaners to clean the exhaust finisher kit, as they may damage the finisher kit.

Partially thread the two flange bolts into the exhaust finisher.

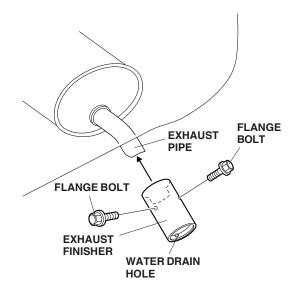

- With the water drain hole facing down slide the exhaust finisher all the way onto the exhaust pipe.
- 3. Push the exhaust finisher firmly until it bottoms against the exhaust pipe, then torque the two flange bolts to 10 N·m (7 lb-ft.).

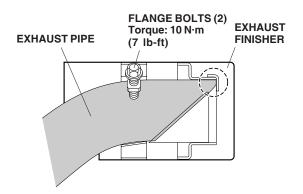

Start the engine, and rev it up a few times. Listen for vibration from the exhaust finisher, and adjust if necessary.